



ULTRATECH
INTERNATIONAL, INC

Ultra-Erosion Guard

Instructions

Opening:

CAUTION: The coiled metal inside the Ultra-Erosion Guard is under considerable tension and the units can open very quickly.

- While holding the Erosion Guard closed with one hand, use the other hand to unsnap each of the four clips. You may need to use both hands to keep the unit closed when opening up the last snap.
- Slowly allow the unit to spring open and expand.

Connecting Multiple Units:

The Ultra-Erosion Guard can be connected in multiple lengths when a wider expanse needs to be covered. Simply snap the male portion of the clips of one unit to the female portion of the clips on the connecting unit. Be sure to connect all four clips.

Securing:

- Securing/anchoring is simple as the Ultra-Erosion Guards are easily held in place with common blanket staples through the attached flap or by shoveling gravel onto the flaps.
- The units can also be secured to the ground by using wooden stakes. In typical applications, staking all four corners with one additional stake in the middle on the back side of the flap is sufficient to keep it in place.